




Toll Free: 1-877-739-2721

info@rexarc.com

An Under-Acetoned Cylinder is a Safety Hazard Because it is Unstable

What are you doing to prevent this?
Avoid Under Acetoning

[Contact Us](#)

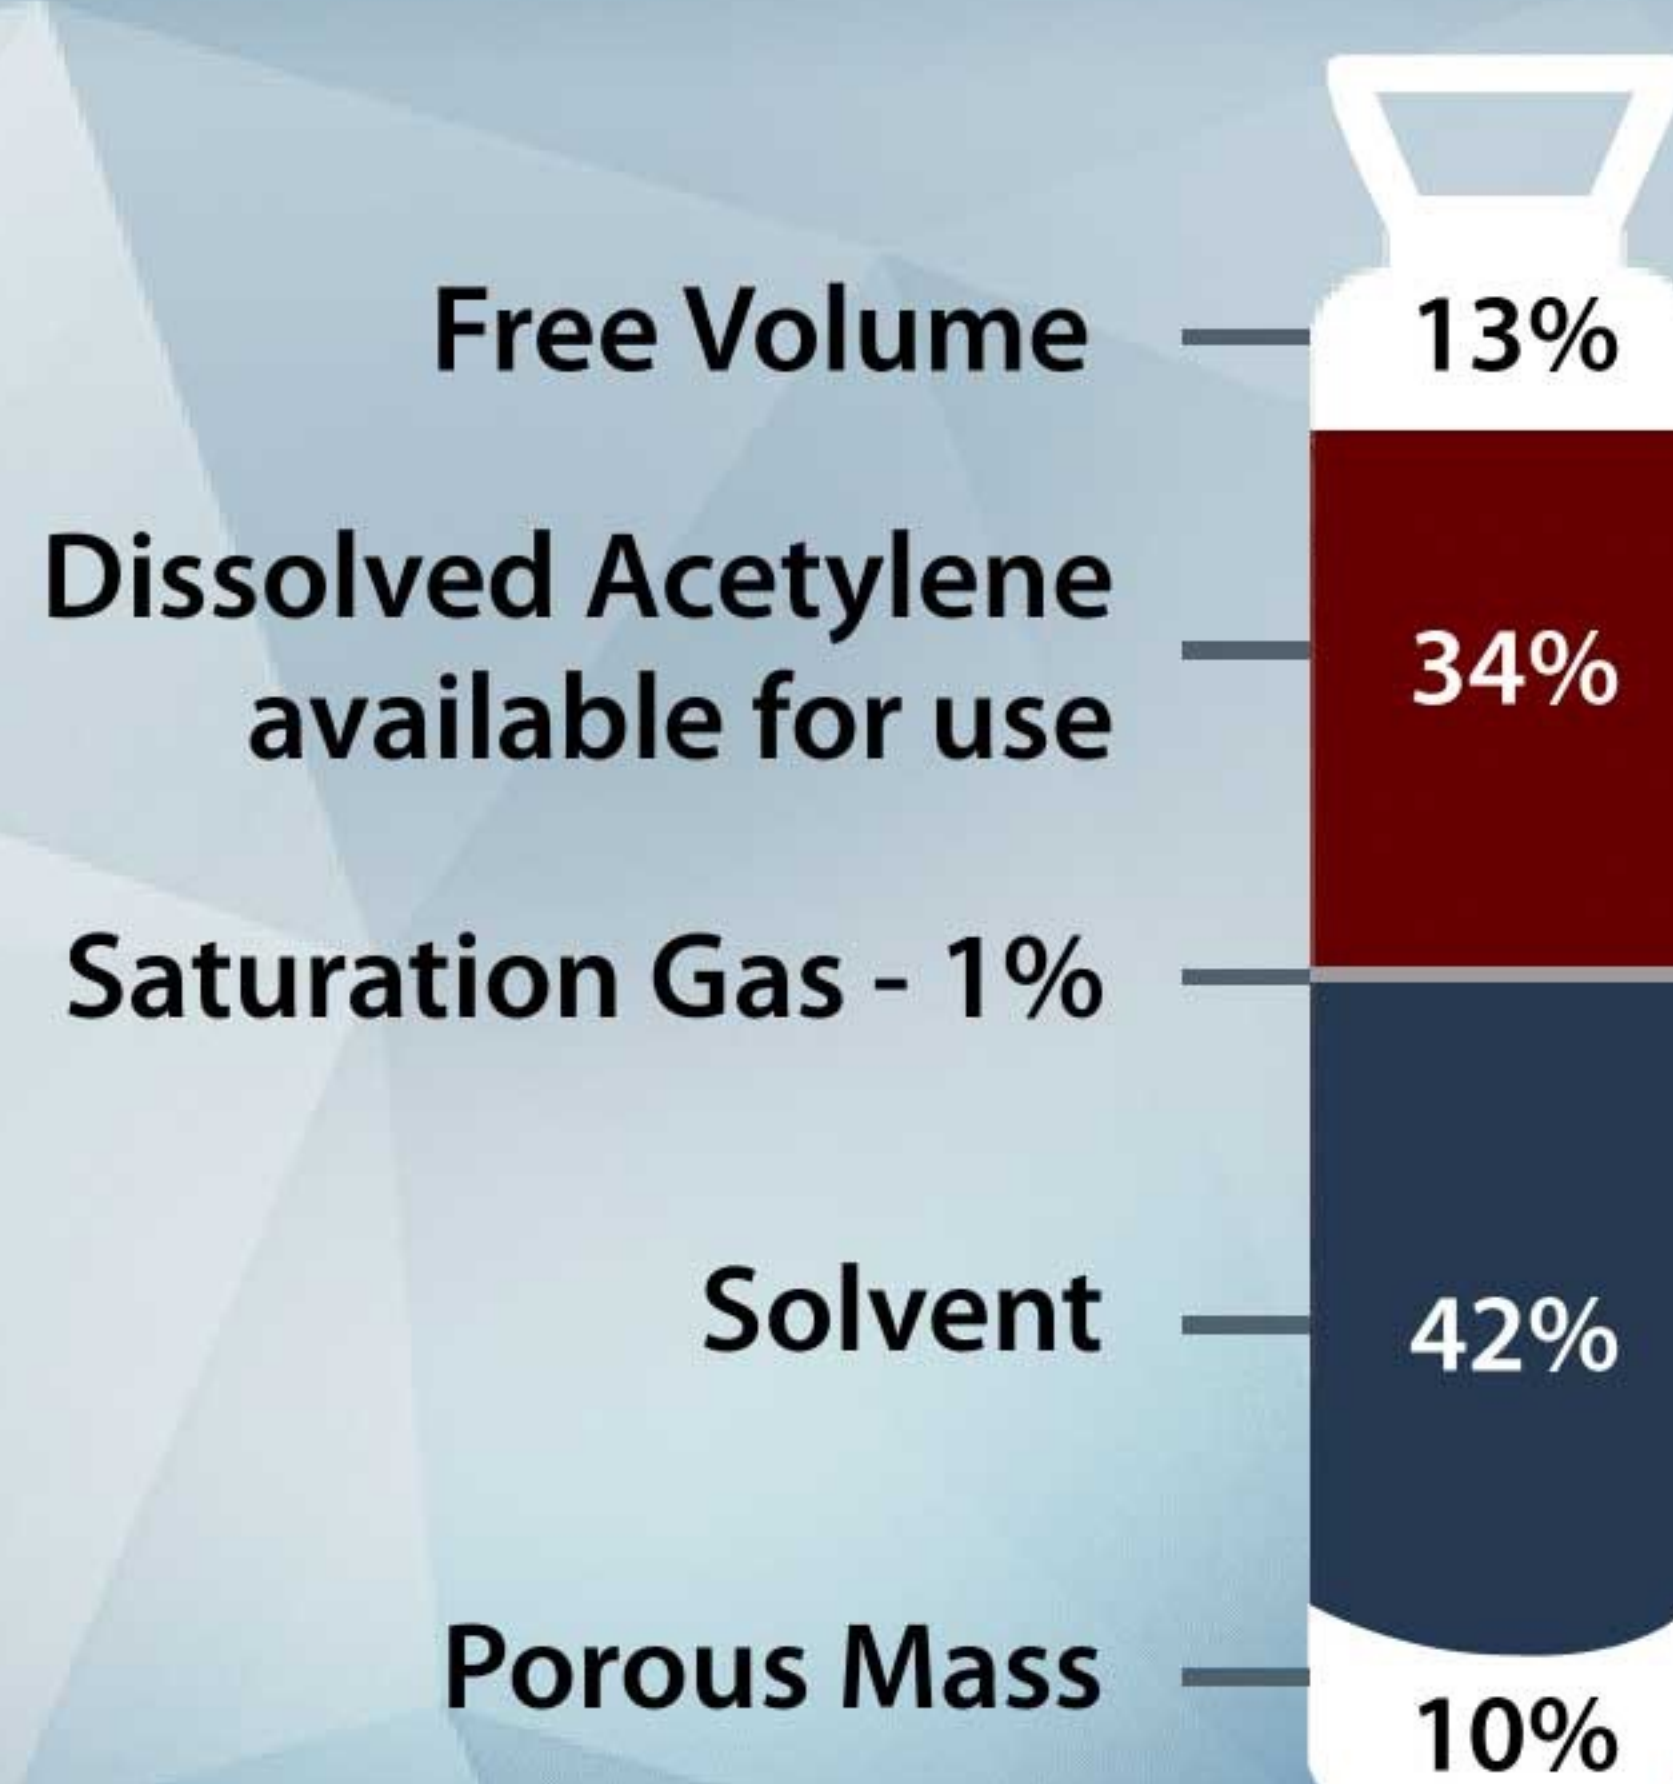

With Rexarc's Auto Acetone Scales, Improve EFFICIENCY & SAFETY!




Intuitive User Interface

- ✓ Automatic level calculations based on weight, pressure & temperature
- ✓ Accurate acetone adding
- ✓ Nitrogen Purged Control Cabinet



Factsheet

Do You Know How Well Acetoned Your Cylinders Are? (Most are ~2lbs. under-acetoned)

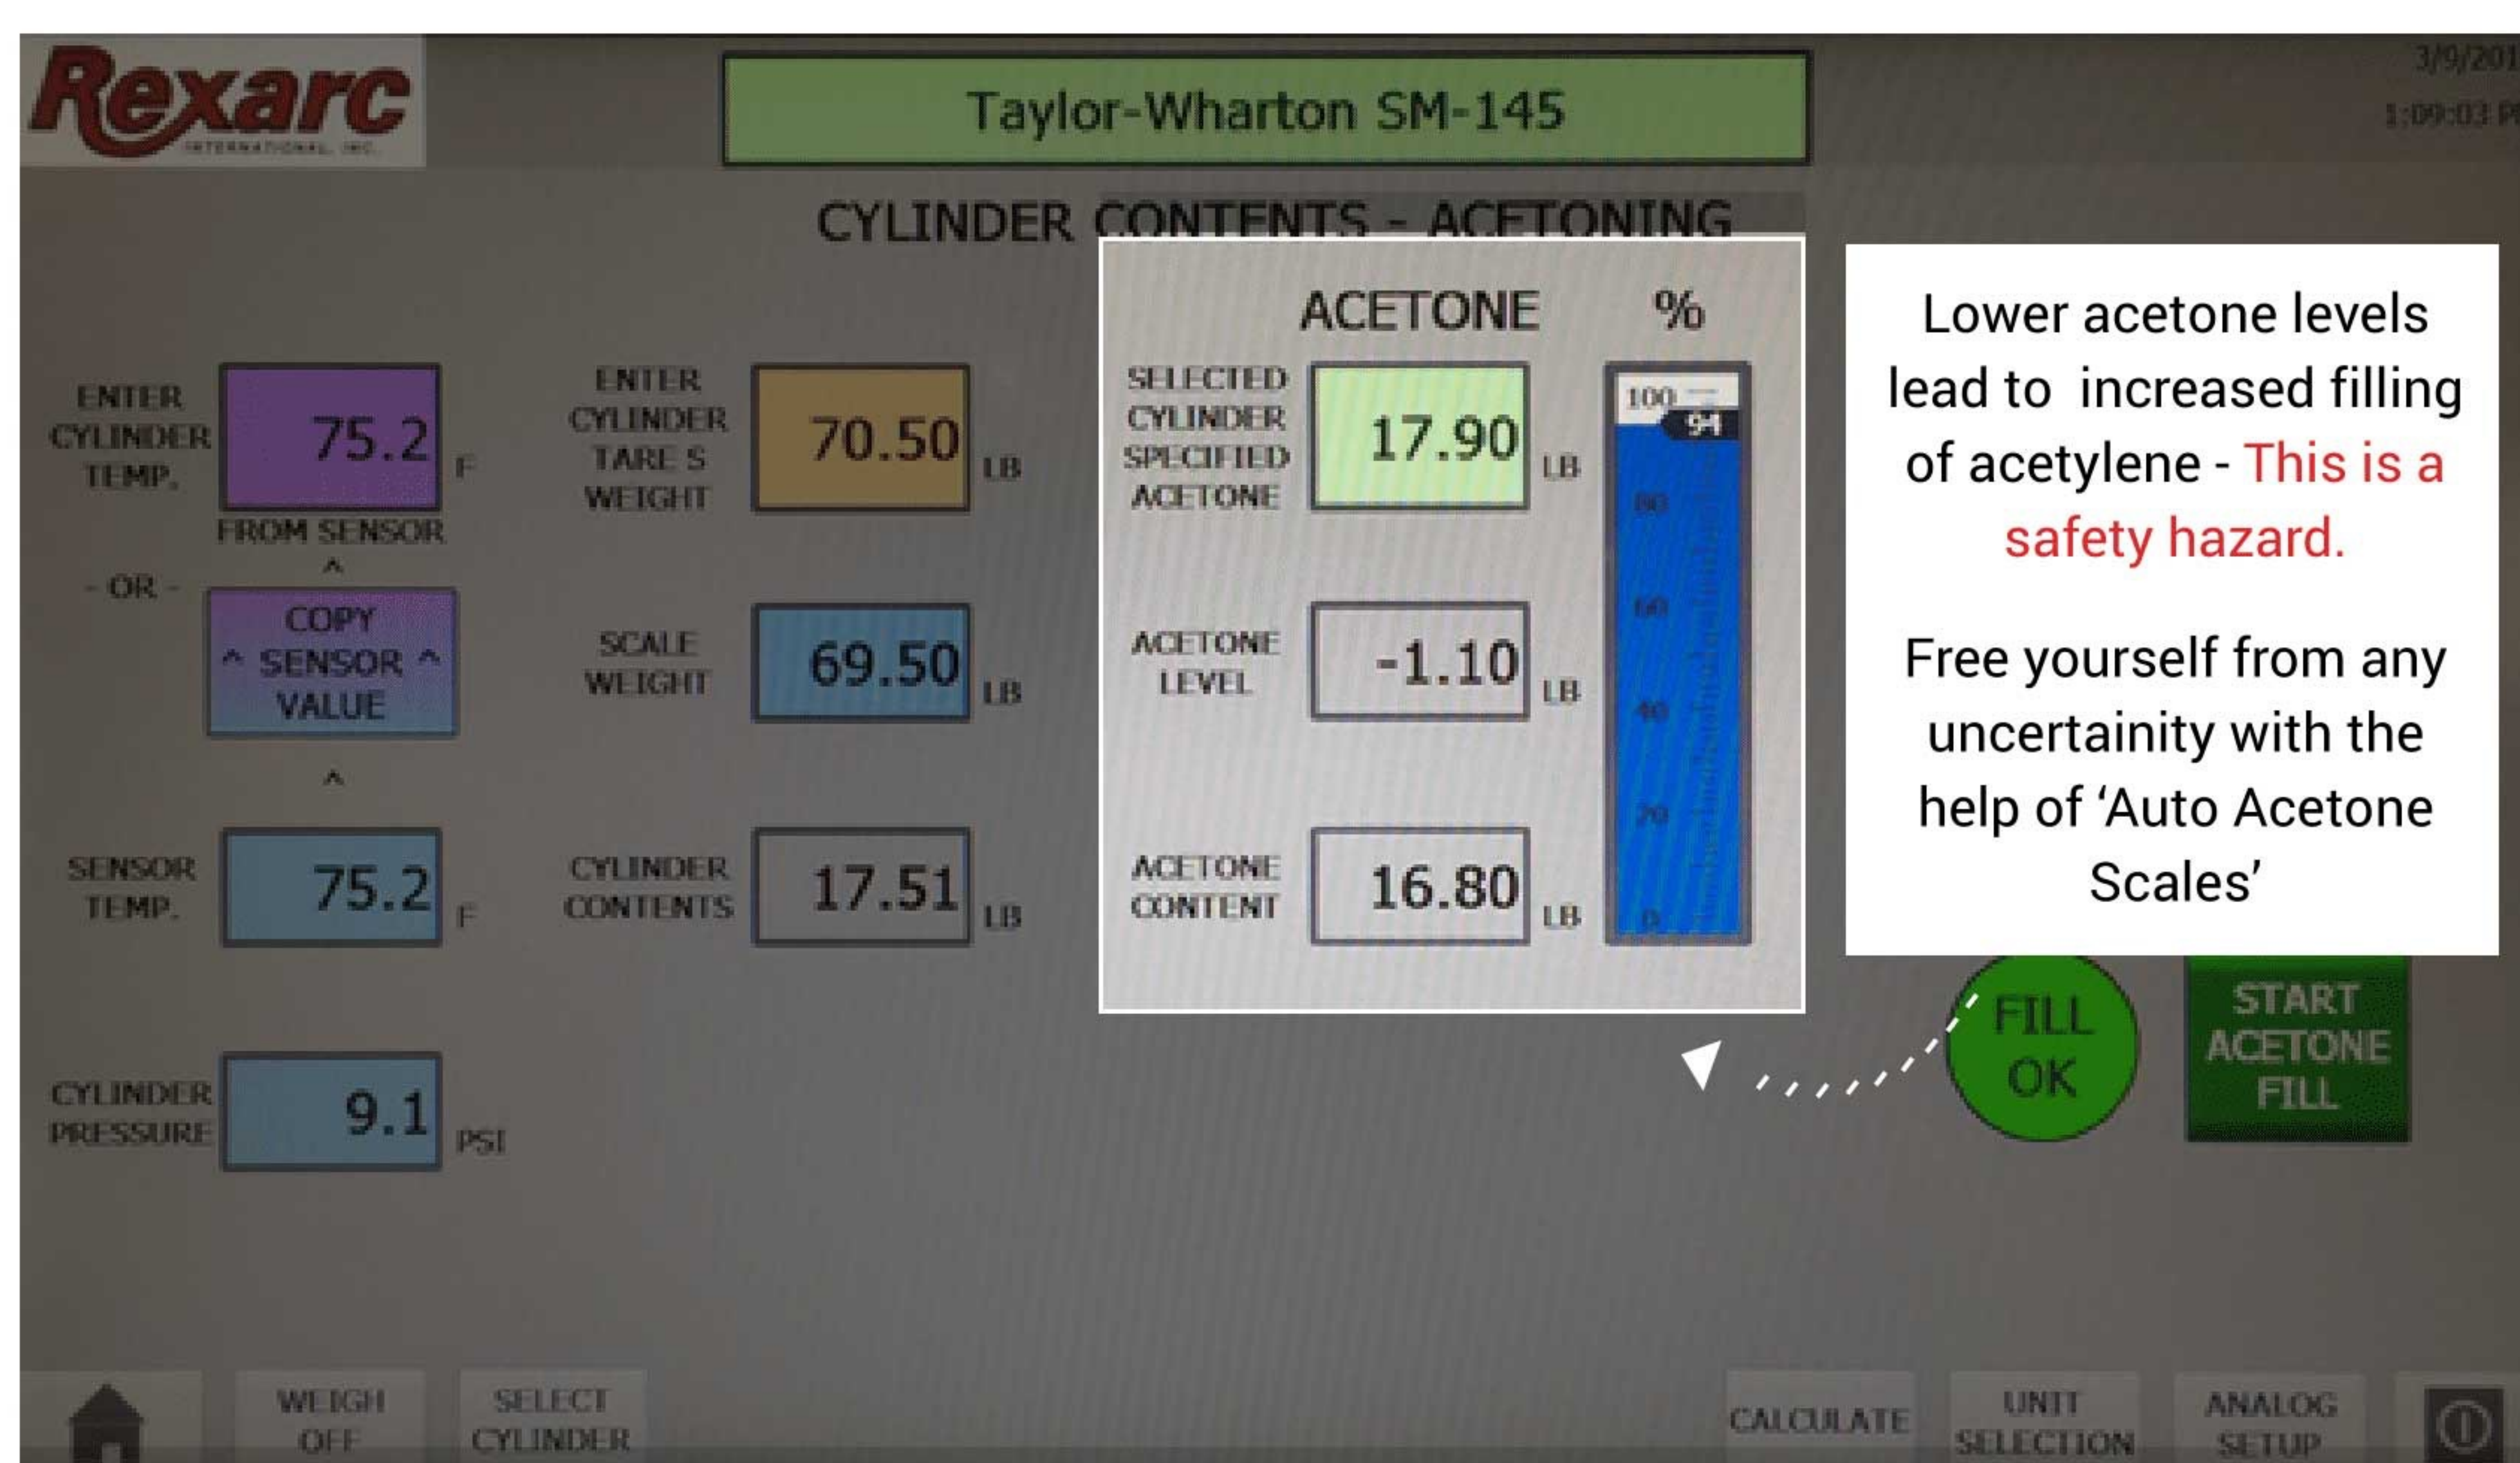

Lower acetone levels lead to increased filling of acetylene - **This is a safety hazard.**

Free yourself from any uncertainty with the help of 'Auto Acetone Scales'

During our tests, we found that most cylinders are approximately 2lbs (1 kg) light on acetone.

Over acetoned cylinders can be dangerous as well. This could lead to accidental overfilling with acetylene, which brings with it problems of safety, efficiency, and other high-risk issues.

Importance of Acetoning



Read More on Our Blog

At Rexarc, We Take Safety Very Seriously



Cylinder Fires Cause Destruction and Injury – Let's Put a *STOP* to It Today.

Rexarc has taken the responsibility to innovate and create tools, products, and components that can ensure safe operations in Acetylene Plants.

Auto-acetone Scales Increase Safety, Remove Doubt.

Find out how Rexarc can help.

[Contact Us](#)

Rexarc – Saving you time and money through innovation



Read Our Blog



Join Us on LinkedIn


Our Bestselling Products & Services



ACETYLENE GENERATOR



PLANT AUDIT & MAINTENANCE SERVICES

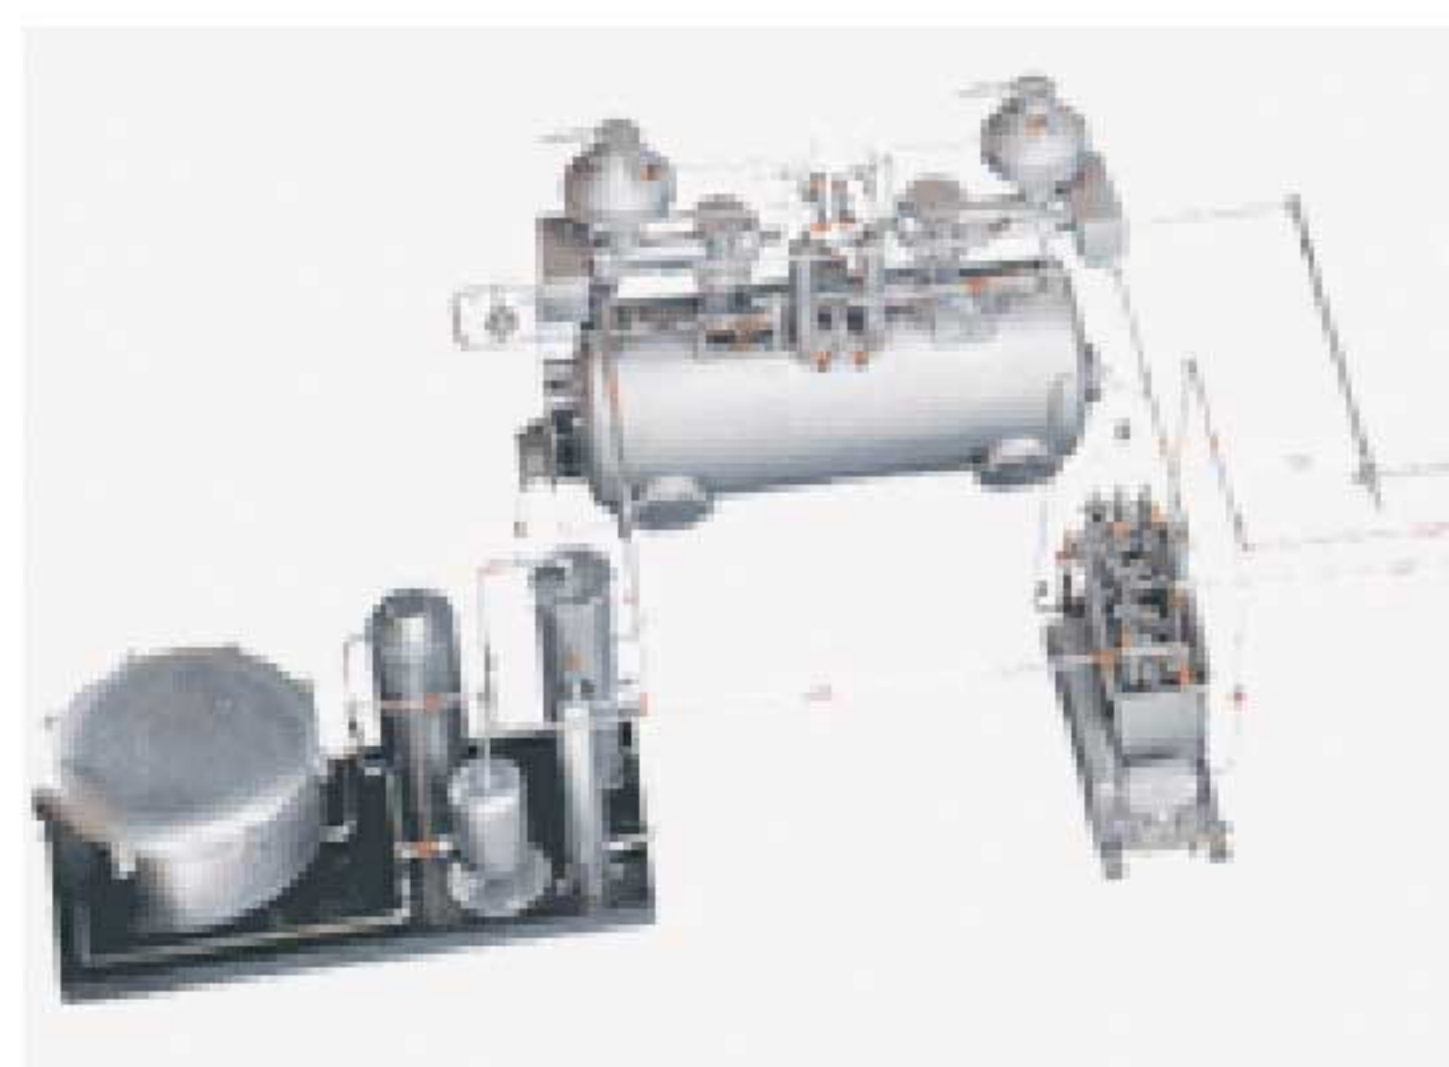

ACETYLENE FILLING PLANT: ATX SERIES

[View All Products](#)